



- 1 FOR ANTIFREEZE LOOP APPLICATIONS, CHANGE LOW PRESSURE SWITCH TO YELLOW LEADS ON LPC TERMINALS OF GEOTHERMAL LOGIC CONTROL BOARD
- 2 H.P.S = Green fault light illuminated when fault indicated.
- 3 L.P.S = Orange fault light illuminated when fault indicated.
- 4 F.S. = Red fault light illuminated when fault indicated.
- 5 COND. = Yellow fault light illuminated when fault indicated.
- 6 Status = Green Status LED will blink in normal operation.
- 7 For 208V operation move this red wire to 208V transformer TAP

⚠ DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE SERVICING.

⚠ WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST 75°C.

Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4118-101