


**SPACE-RAY®**

## HIGH PRESSURE HIGH/LOW CONTROL PANEL WITH INTEGRAL DIGITAL THERMOSTAT

**MODELS: FOR SHP17 HIGH PRESSURE BROODERS**

### INSTALLATION AND OPERATION INSTRUCTIONS

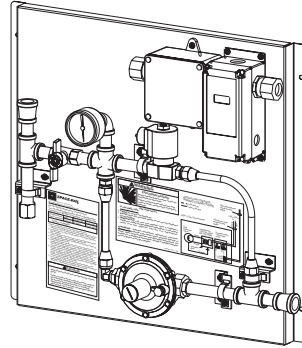

**OWNER/INSTALLER:** For your safety this manual must be carefully read before installing, operating or servicing this brooder. This brooder is intended for use with Propane Gas. It must be installed by a qualified service person or a licensed contractor in accordance with state and local codes. In the absence of these codes, the installation must conform to the National Fuel Gas Code ANSI Z223.1 (latest edition) also know as NFPA54 or the CAN/CGA-B149.1/2 Installation Code in Canada.

**▲WARNING:** Improper installation, adjustment, alteration, service or maintenance can cause injury, property damage or death. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency or the gas supplier.

**INSPECT** all combustion air openings into the building and, if necessary, clear as they become blocked by litter, dust, feathers or other matter.

**INSPECT** and clean the brooder on a regular basis to allow proper brooder operation.

**FOR YOUR SAFETY:** EXHAUST FANS **MUST** be operating on an appropriate cycle when brooders are operating to avoid a high concentration of carbon monoxide. When used without fresh air, this brooder may give off carbon monoxide, an odorless and poisonous gas. **CARBON MONOXIDE POISONING MAY LEAD TO DEATH.** Early signs of carbon monoxide poisoning resemble the flu with headaches, dizziness and nausea. If you experience these signs, **GET FRESH AIR IMMEDIATELY!** Have the brooders serviced as soon as possible and check the ventilation in the house.

These brooders are designed for agricultural applications and may operate with Liquid Propane (LP) Gas Only.

#### **IF YOU SMELL GAS:**

- ! **DO NOT** try to light any appliance.
- ! **DO NOT** touch any electrical switch; do not use any telephone in your building.
- ! **IMMEDIATELY** call your gas supplier from a neighbor's telephone. Follow the gas supplier's instructions. If you cannot reach your gas supplier, call the fire department.

#### **FOR YOUR SAFETY**

**DO NOT** store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

**SAVE THIS MANUAL  
FOR FUTURE REFERENCE.**

## TABLE OF CONTENTS

<u>Section</u>	<u>Description</u>	<u>Page</u>
1)	GENERAL INFORMATION .....	1
2)	CONTROL SPECIFICATIONS .....	1
3)	INSTALLATION .....	2
4)	ELECTRICAL CONNECTIONS .....	3
5)	GAS CONNECTIONS .....	4
6)	INSTRUCTIONS FOR TESTING FOR GAS LEAKS AND PROPER GAS PRESSURE .....	4
7)	LIGHTING AND SHUTDOWN INSTRUCTIONS .....	5
8)	REPLACEMENT PARTS GUIDE .....	6

## 1. GENERAL INFORMATION

Installation of the **SHP17** High/Low Gas Control Panel must be in accordance with all applicable codes shown in the instructions and/or the local codes and authorities having jurisdiction. In the absence of local codes, the **SHP17** High/Low Gas Control Panel must be installed in accordance to the National Fuel Gas Code ANSI Z223.1/NFPA54 in the U.S. or the CAN/CGA-B149.1/2 Installation Code in Canada.

This control panel is intended for brooders that have a maximum gas pressure of 5PSIG and a minimum pressure of 10 in. w.c.



### CAUTION

DO NOT Exceed 5 PSI inlet pressure to the control panel.

Failure to follow these instructions may result in the following: Invalidate Warranty, Damage to the brooder components due to overfiring, significantly increased gas consumption and hot spots below the heaters.

Copies of the National Fuel Gas Code (ANSI Z223.1-latest edition) are available from the CSA at 8501 E. Pleasant Valley Rd., Cleveland, OH 44131 or 55 Scarsdale Road, Don Mills, Ontario M3B 2R3. All NFPA codes are available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

## 2. CONTROL SPECIFICATIONS


GAS SUPPLY PRESSURE	<i>Propane Gas:</i>	5 PSIG	350 mbar
NO OF BROODERS	<i>SHP17- L6:</i>	40	40
MAXIMUM GAS CONSUMPTION	<i>Propane Gas:</i>	71.6 GPH	28.8 L/hr
POWER SUPPLY	<i>Thermostat</i>	120V AC 60Hz	120V AC 60Hz
TEMPERATURE RANGE	<i>thermostat</i>	-30 to 212 ° F	-34 to 100 ° C

---

### 3. INSTALLATION

---

1. Chose the location for the control panel using the following guidelines.
  - Control panel must be mounted to a flat stable wall inside the building.
  - Ensure that the control panel is located in a position where the inlet and outlet will be easily accessible for installation and future maintenance.
  - Consideration should be taken that the user will need to access the thermostat directly to make adjustments to the temperature set point.
  - The panel has a 12ft power cord for 120V therefore a location with 12ft of a 120V outlet is required.
2. Install the panel using the four PN 02240010 #12 x 3/4" screws supplied in the holes shown below.

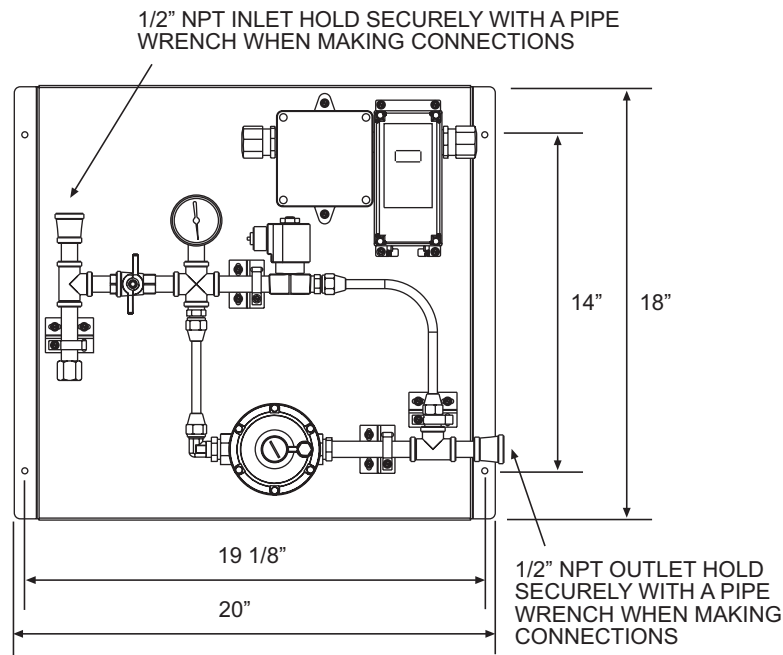


**FIGURE 1**

3. Select a location for the sensor.
  - The location of the sensor will depend on the layout of the area to be heated. It is recommended for best results to locate the bulb above the height of the livestock in an area to be heated and at least 6ft (1.8m) from the brooder. The total sensor cable length is 45ft.

---

### 4. ELECTRICAL CONNECTIONS

---

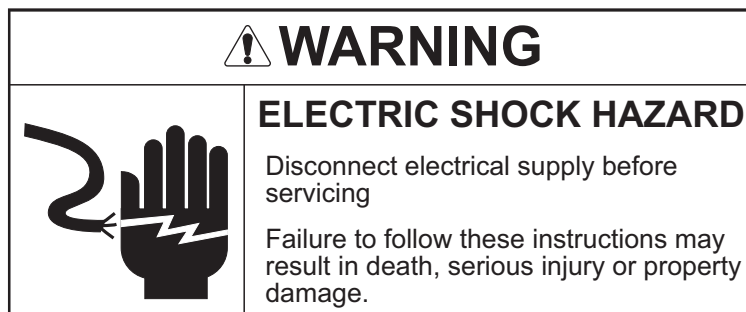

- 
- 12ft power cord supplied with panel.
- 120V 60Hz
- N L
- White Black
- 45ft cable/sensor supplied with panel.
- SH17 HIGH-LOW Control Panel
- Gas Solenoid Valve
- Transformer 120/24V 20VA PN 30279000
- Programmable Thermostat A419
- Black
- Black
- Junction Box
- Green
- NO
- 120
- AC COM
- (+) SEN
- (-) COM
- Field Wiring
- Factory Wiring

**6. Refer to the instruction sheet with the thermostat for programming information.**


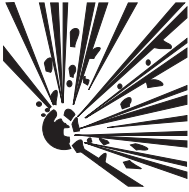
1. Gas piping for the house must be sized to be capable of satisfying the entire demands of the house should all equipment be operating at the same time. Please use the National Fuel Gas Code for the sizing of piping for the house.
2. Connect to the supply tank or manifold in accordance with the latest edition of the National Fuel Gas Code (ANSI Z223.1) and/or local codes. Authorities having jurisdiction should be consulted before the installation is made. Refer to the latest edition of CAN/CGA B.149-1/2 Installation Codes for Gas Burning Appliances and Equipment in Canada.
3. Pipe joint compounds must be resistant to the action of liquefied petroleum (LP) gases.
4. The **SHP17** High/Low Gas Control Panel is intended to be used with a regulated supply pressure at 5 PSIG. The outlet pressure will be between 5 PSIG at maximum heat input and 10 in. w.c. for minimum heat input. The **SHP17** High/Low Gas Control Panel is designed to control the gas pressure to maintain a specific temperature.
5. Gas connections to the control panel are shown in figure 1.

---

## 6. INSTRUCTIONS FOR TESTING FOR GAS LEAKS AND PROPER GAS PRESSURE

---

**▲WARNING: DO NOT OMIT THESE TESTS!**

 <b>WARNING</b>	
	<b>EXPLOSION HAZARD</b>
	Before operating the brooders. Check the installation for gas leaks. Failure to follow these instructions may result in death, serious injury or property damage.

### **TESTING THE INSTALLATION FOR GAS LEAKS:**

1. Inspect all connections and appliance valves to be sure connections are wrench-tight and that all appliance valves are closed, including the pilot valves.
2. Use the high pressure test gauge on **SHP17** High/Low Gas Control Panel.
3. Fully open the LP gas container valve slowly to pressurize the piping system. Once the system is pressurized and stabilized, close the container valve tightly.
4. Observe the indicated pressure on the test set gauge. This reading should be approximately equivalent to the set delivery pressure of the final stage regulator. Now, slowly open one burner valve or pilot valve on the appliance to vent off just enough gas to reduce the pressure on the test gauge by 1 in. water column, then close the burner or pilot valve.

If the pressure remains unchanged on the gauge for at least 10 minutes, the system can be assumed leak-tight. If a drop in pressure does occur, it indicates a leak in the system.

If the pressure drop occurs, check the joints, connectors, and other possible points of leakage with an approved, high quality leak detection solution. **NEVER USE A MATCH OR OPEN FLAME TO CHECK FOR LEAKS.** Once a leak has been located and repaired, repeat Steps 3 and 4 above. If there is an increase in pressure, it indicates that the LP gas container valve is not shut off tightly. Shut off the valve tightly and repeat Step 4 above.


**NOTE:** Do not expose final stage piping to excessive heat or direct sunshine during the leak test. Pressure build-up in the line due to heat may compensate for pressure loss due to leaks. This will prevent the gauge reading from indicating system leaks.

**▲WARNING:** Gas Pressure Testing is to be performed only by qualified personnel.

### **CHECK GAS INLET (SUPPLY) PRESSURE:**

1. Use the gas pressure gauge installed on the **SHP17** High/Low Gas Control Panel to check the supply pressure. Turn the shut off valve to the "ON" position and light the brooders with the thermostat set to the highest temperature to give maximum gas pressure. **DO NOT EXCEED 5PSI INLET PRESSURE TO THE BROODER.**

**FIGURE 3**

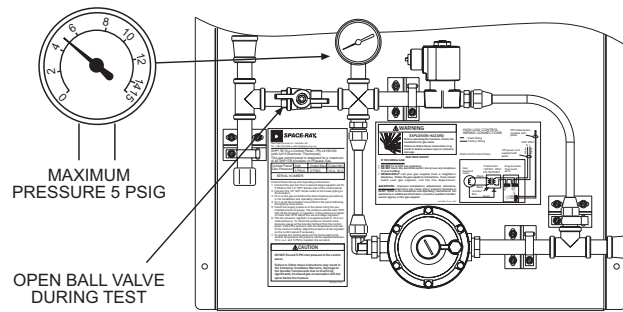

**REGULATOR LOCK-UP AND LEAKAGE:**

After the leak testing and delivery pressure tests have proven satisfactory, the regulator lock-up and leakage test may be performed. The lock-up pressure of the final stage regulator should be slightly higher than, but not more than, 120% of the set delivery pressure. For example, on a delivery pressure setting of 5 PSIG, the maximum allowable lock-up pressure is 6 PSIG.

**To perform the lock-up and leakage test, follow these steps:**

1. With the LP tank valve fully open, shut off all appliance valves so there is no demand for gas. This includes shutting off all pilots.
2. A slight rise in pressure will occur under these conditions. This rise should be no more than 120% of the delivery pressure. This is the lock up pressure. **NOTE:** A quick rise in pressure above the allowable lock-up point could indicate undersized piping, a worn seat disc or foreign material in the seating area. **This condition must be corrected before putting the system in service.**
3. Continue the test for five minutes or more. If a creeping rise in pressure is noticed, the final stage regulator seat is not closing off properly. The regulator must be replaced or repaired, and the system retested, before putting the system in service.

---

## **7. LIGHTING AND SHUTDOWN INSTRUCTIONS**


---

1. Turn on the gas supply, set the thermostat to the maximum temperature to obtain the fully open position
2. Push and hold down the button on the safety valve. Immediately light the gas at the emitter with a flame that will allow you to keep a safe distance from your hand. Continue to hold the button down for about one (1) minute after the brooder is lit. If it goes out, wait five (5) minutes before trying to relight the pilot. **NOTE: If the button does not pop up when released, stop and immediately call your service technician or gas supplier.**
3. If the burner will not stay lit after several tries, turn off the gas and call your service technician or gas supplier.
4. When the burner flame remains lit, adjust the thermostat to the desired temperature.
5. To turn off the brooders shut off the gas supply valves.
6. Allow the gas to be burnt off by the brooder. When the brooder flame is extinguished all gas is expelled from the system.

## 8. REPLACEMENT PARTS GUIDE

Item No.	Part No.	Description
1	03317030	Pressure gauge 0 to 15 PSIG
2	30037089	Solenoid control valve – 24V
3	44158090	Wiring Connections Label
4	03837040	Pipe Cap 3/8" NPT
5	44158100	Nameplate Label
6	03307300	Regulator Max 10 PSIG inlet 10 in. w.c. outlet
7	30741000	A419 Electronic thermostat
8	30573000	A99 Sensor

Pipe fittings are standard hardware items and can be purchased at any local hardware store.  
**ALL ILLUSTRATIONS ARE INTENDED TO GIVE THE GENERAL IMPRESSION OF UNITS ONLY. WE RESERVE THE RIGHT TO ALTER ANY SPECIFICATION WITHOUT NOTICE.**

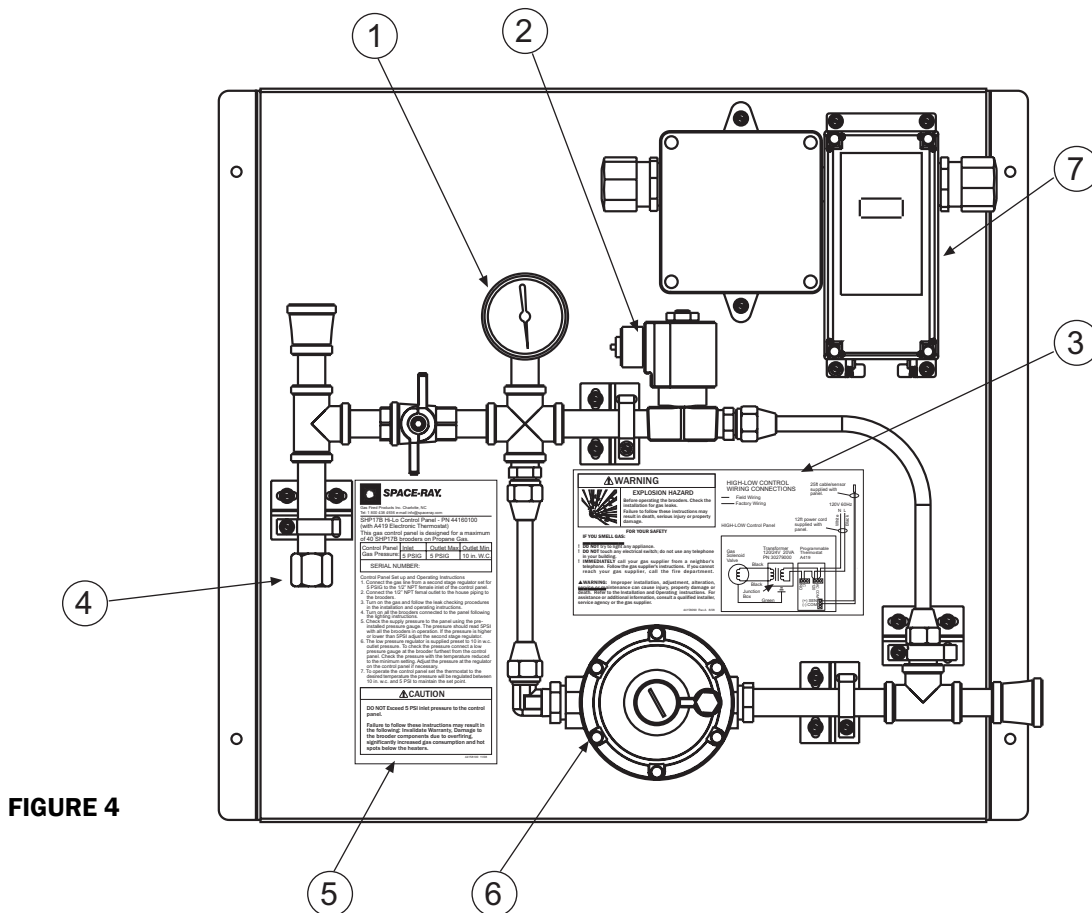

### FIGURE 4



## **GAS-FIRED PRODUCTS LIMITED WARRANTY**

### **LIMITED WARRANTY**

Gas-Fired Products, Inc. (GFP), the manufacturer, warrants the original owner of any Space-Ray Poultry Heating Product that it will be free from defects in material or workmanship under normal use and service. The heater(s) shall be installed, used and maintained strictly in accordance with the manufacturer's instructions. The manufacturer's sole obligation under this warranty is limited to furnishing replacement parts, F.O.B. Charlotte, NC, for 12 months from the date of installation, or 18 months from the date of shipment by the manufacturer, whichever period expires first. Labor charges for the removal of defective parts or the installation of replacement parts are not included.

**WARNING:** Manufacturer's warranty shall not apply: (a) to circumstances where gas pressure to each heater is higher than that specified for each heater; (b) to circumstances where the type of gas is different than the type of gas noted on the name plate for each heater; (c) to water damage to gas controls; and (d) to any heater or component which has been repaired or replaced with other than factory parts, modified in any way, misused or damaged, or which has been used contrary to the manufacturer's written instructions.

**LIMITATION OF WARRANTY:** THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. WITHOUT LIMITING THE FOREGOING, THE MANUFACTURER EXPRESSLY EXCLUDES ANY AND ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND ANY IMPLIED WARRANTY OF MERCHANTABILITY FOR ITS PRODUCTS.

If any provision of this warranty is found to be void, unenforceable or unconscionable, then that portion is hereby severed and the remainder of this warranty is hereby saved and shall remain in force.

**EXCLUSIVE REMEDY:** The sole and exclusive remedy under this warranty is the replacement of the defective parts or brooders as hereinabove specified. THE MANUFACTURER DOES HEREBY EXPRESSLY EXCLUDE ANY AND ALL LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES UNDER THIS OR ANY OTHER WARRANTY. Without intending to limit the aforesaid exclusion, THE MANUFACTURER DOES HEREBY EXCLUDE ANY LIABILITY UNDER THIS OR ANY OTHER WARRANTY FOR INJURIES OR COMMERCIAL LOSSES TO PROPERTY THAT RESULT FROM THE OPERATION, PROPER OR IMPROPER, OF ITS PRODUCTS.

**ADDITIONAL TERMS:** Manufacturer assumes no liability for delay in performing its obligations under this warranty. Manufacturer assumes no liability for failure in performing its obligations there under if failure results directly or indirectly from any cause beyond its control, including but not limited to acts of God, acts of Government, floods, fires, shortages of materials, strikes and other labor difficulties or delays or failures of transportation facilities.



This is a Non-Residential product. Installation and service shall be by a Licensed Contractor and in accordance with National and Local Codes.

When presenting warranty claims, proof of date of purchase must be submitted.

No Representative is authorized to assume for the manufacturer, any liability except as set forth above.

For the name of your nearest distributor in case of claim under this warranty, contact: Space-Ray / Gas-Fired Products, Inc. / 305 Doggett St., PO Box 36485 / Charlotte, NC 28236 / Phone: (704) 372-3485 / Fax: (704) 332-5843 / email: info@spaceray.com.

**FOR YOUR RECORDS:**

Space-Ray Control panel Number: \_\_\_\_\_ Date Installed: \_\_\_\_\_

Serial Numbers: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

*For replacement parts, please contact your local distributor or:*

**SPACE-RAY**

305 Doggett Street • Charlotte, NC 28203-4923

Phone (704) 372-3485 • Fax (704) 332-5843 • info@spaceray.com